INSIGNIA flex

10.1" Android Tablet | NS-14T004

# QUICK SETUP GUIDE

## WE ARE GOING GREEN!

A copy of your *User Guide* is not provided in the box but is available online. To find your manual, touch the **?** icon on your tablet. You can also go to www.insigniaproducts.com, touch **Support & Service**, enter your model number in the box under **Manual**, **Firmware**, **Drivers & Product Information**, then touch ▶.

Before using your new product, please read these instructions to prevent any damage.

## In the box

- USB power adapter
- Micro USB cable
- *QUICK SETUP GUIDE*
- *IMPORTANT INFORMATION*

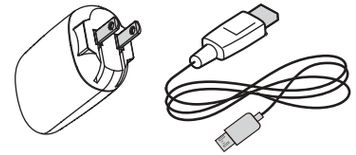

## Features

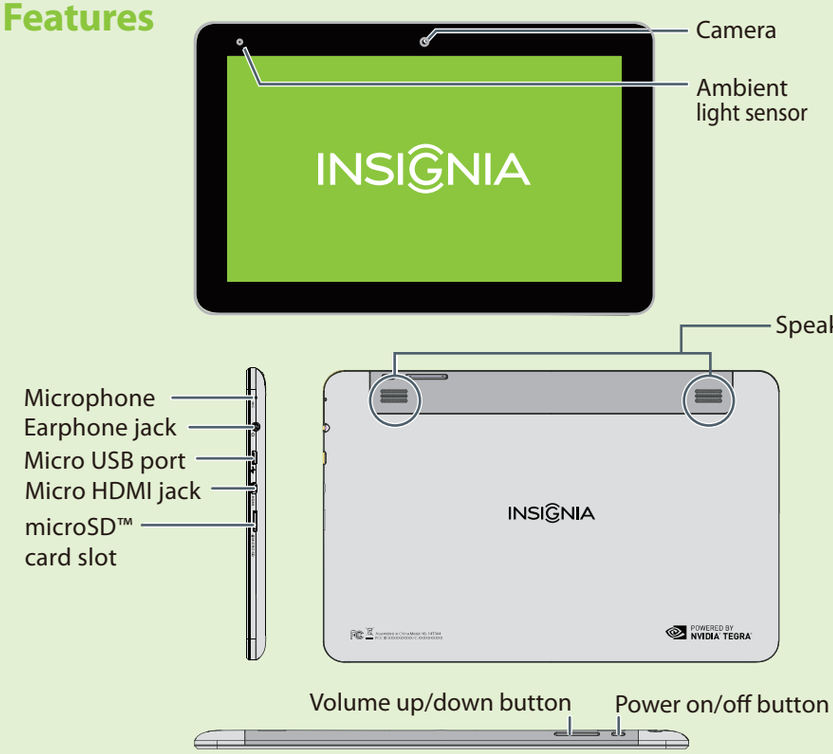


## Charging the battery

Before using your tablet for the first time, you need to charge the battery for a minimum of eight hours.

**1** Insert the micro USB cable into your tablet's micro USB port.

**2** Insert the other end of the micro USB cable into the USB power adapter (wall charger), then plug the USB power adapter into a power outlet to start charging the battery. When fully charged, your tablet's battery provides 8 hours of continuous video playback (Wi-Fi turned off) or 10 hours of continuous Web browsing.

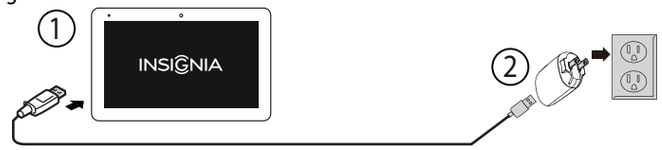


## Turning on your tablet

Press and hold the ⏻ (power) button on the top, right side of your tablet.

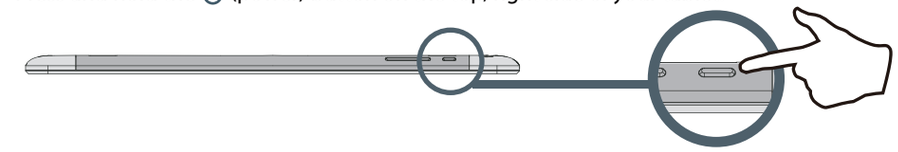

## Setting up your tablet

When you turn on your tablet for the first time, the Welcome screen appears. Follow the instructions displayed on your tablet to complete set up.

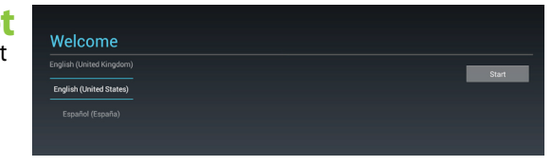


## Connecting to a Wi-Fi access point

To use the Wi-Fi feature, you need access to a wireless access point or hotspot.

**1** Touch the (applications) icon.

**2** Touch the settings icon.

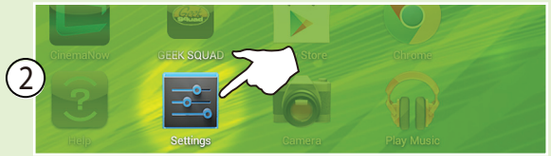


**3** Touch **Wi-Fi** to access the list of available networks.

**4** Select the Wi-Fi network you want to connect to.

**5** If you are prompted to enter a password, touch the keys on the on-screen keyboard to enter the password, then touch **Done**.

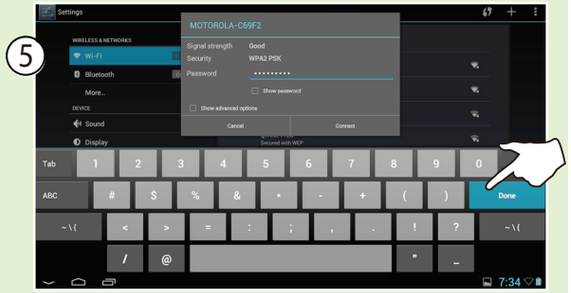


**6** Touch **Connect** to connect to the wireless access point. If the connection is successful, the connected icon appears.

## To open an application:

1 Touch the (applications) icon.

2 Touch the application you want to open.

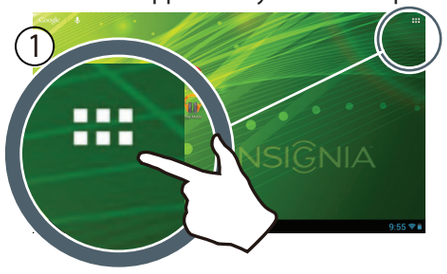


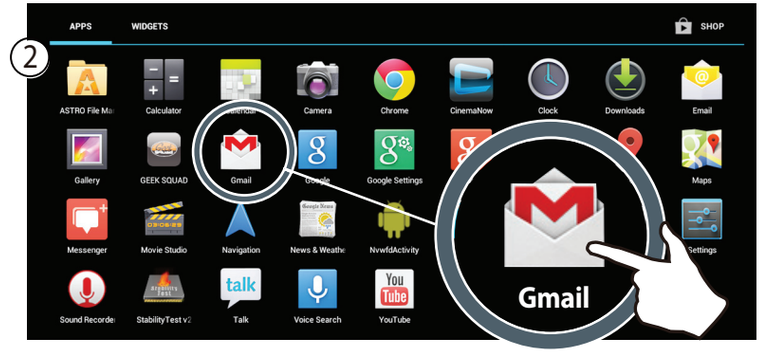


## For additional help:

• Touch the **Help** icon. *How Do I*…opens.

## To turn off your tablet:

1 Press and hold (power) until the *Power off* screen opens.



2 Touch **Power Off**.

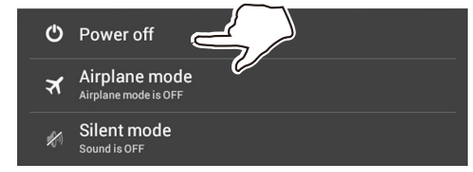


3 Touch **OK** to turn off your tablet.

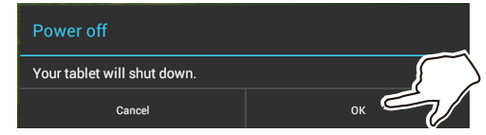


**Caution:** Use only the included power adapter or a qualified 5V/2A power adapter to charge your tablet's battery. An unqualified adapter or an adapter that is not a 5V/2A adapter may damage your tablet.

## Scan to learn more.

**One-year limited warranty**
Visit www.insigniaproducts.com for details.

**Need additional help?**
Check out our online **community forum** at www.insigniaproducts.com for helpful information from other Insignia Tablet owners.

**We're here for you**
www.insigniaproducts.com
For customer service, call: **877-467-4289 (U.S./Canada markets)**

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA 55423-3645
© 2013 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

## Using gestures to navigate

| | | |
|---|---|---|
| **Touch** | | Touch an application or another item with your finger to open or select it. |
| **Touch and hold** | | Touch an item with your finger and do not release it until your tablet responds. |
| **Drag** | | Touch and hold an item with your finger, then move your finger to the position where you want to place the item. |
| **Flick** | | Quickly slide your finger either vertically or horizontally across the screen. |
| **Double-touch** | X2 | Quickly touch the screen twice. |
| **Pinch** | | Pinch your fingers together or move them apart. |
| **Rotate** | | To change the screen orientation from portrait to landscape (or from landscape to portrait) turn your tablet sideways. |

## Function buttons

| Button | Icon | Function |
|---|---|---|
| **Text search** | Google | Search on Google. |
| **Voice search** | | Voice search on Google. |
| **Return** | | Return to the previous screen. |
| **Home** | | Return to the Home screen. |
| **Multi-task** | | Open the list of recently used and running applications. |
| **APPS** | | View all applications installed on the tablet. |
| **Option** | | Open an options menu. |
| **Close** | | Close the keyboard. |
| **Drop – down** | | Open a drop-down menu. |